


System install.

1. Format the USB flash disk, format: NTFS, name: WINPE.

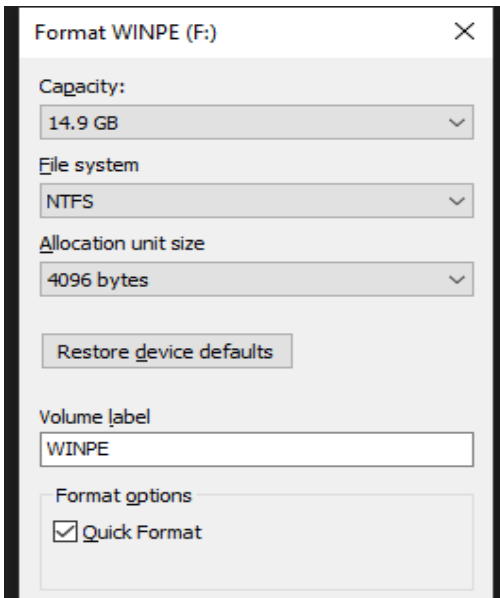

2. After unzipping, copy all files to a USB flash disk.

Name	Date modified	Type	Size
Boot	2020-07-09 17:14	File folder	
EFI	2020-07-09 17:14	File folder	
images	2020-07-09 17:15	File folder	
scripts	2020-07-09 17:15	File folder	
sources	2020-07-09 17:15	File folder	
bootmgr	2019-03-18 15:29	File	401 KB
bootmgr.efi	2019-03-18 15:47	EFI File	1,475 KB

3. Insert the USB disk into PC, After booting , Press F7 repeatedly, select **“UEFI: xxx flash disk”**, ENTER.

